

Master Code \_\_\_\_\_

Technician Name \_\_\_\_\_

### How to arm the system in the Away Mode.

- Close all protected doors and windows; The Ready Indicator must be on.
- Enter 4 Digit user code + AWAY
- You will have \_\_\_\_\_ seconds to leave the premises.

### How to arm the system in the Stay Mode.

- Close all protected doors and windows. The Ready Indicator must be on.
- Enter 4 Digit user code + STAY

### How to disarm the system.

- Enter 4 Digit user code + OFF
- If you entered a wrong code, wait 3 seconds then repeat the process.

### How to set the date and time (Alpha Keypad Only).

- Enter 4 Digit User code +[#] + [6] + [3]
- Press [\*] when the Date and Time is displayed.
- Press [\*] to move ahead, press [#] to go back.
- Enter 2 Digit hour setting (i.e. 04 for 4 O'clock, 12 for 12 O'clock)
- Enter 2 Digit minute setting.
- Press [1] for AM, [0] for PM.
- Enter last 2 Digits of the current year (i.e. 06 for 2006)
- Enter 2 Digit month setting.
- Enter 2 Digit day setting.
- To exit, press [\*] when the cursor is at the last digit or wait (30) seconds.

### How to view current date and time.

- Enter 4 Digit user code + [#] + [6] + [3]
- OR, Press the Function keys A, B, C, or D (MUST BE PROGRAMMED)

### How to bypass one or more zones.

- Enter 4 Digit user code + BYPASS
- Enter 2 Digit zone number(s) for the zone(s) you want to bypass (i.e. 01 = zone 1)
- When finished, the keypad will display bypassed zone(s) \*Alpha Keypad only\*
- Standard Fixed-Word keypads only display zone(s) number bypassed.

### How to unbyypass zone(s).

- Enter 4 Digit Used code + OFF

### How to add, change, and delete user codes.

- Enter Master Code + [8] + user no. + new users code
- To change master code, Enter Master Code + [8]+[0]+[2]+ New 4 Digit Code **2-TIMES**, keypad will beep twice.
- To delete user code(s), Enter Master Code +[8]+ [user no.(s)] + [#] + [0]

### How to view keypads functions.

- Standard Fixed-Word Keypads (6150) only display numbers for faulted zones, Press the \* button to scroll through zone(s).
- Alpha Display Keypad (6160) Press \* when you are prompted (hit \* for Faults) this will display zone(s) that are faulted.



